

LASER DISTANCE METER

CP40

Operation Manual



AAA x2
Batteries

. Safety Information

1. This is a Class 2 laser tool, laser radiation is emitted from this product and is manufactured to comply IEC 60825-1: 2007, EN 60825-1:2007, EN 61326-1:2013 and CRF21, parts 1040.10 and 1040.11.
2. Use of controls, adjustment procedures other than those specified herein may result in laser radiation exposure.
3. Never stare directly into beam or aim the laser beams at others.
4. Product contains semiconductor laser diodes with wavelengths of 650 nanometers.
5. The total continuous output of the beams never exceeds 1.0 milli-watts.
6. Product complies with EMC Test according to EN61000-6-3:2001+A11:2004, EN61000-6-1:2001, EN61326-1:2013, IEC 61326:2012 and FCC Test according to PART 15.




. Inside The Box

- CP40 Laser Distance Meter x1
- AAA Battery x2
- Operation Manual x1
- Carrying Case x1
- Safety Strap x1


. Specification

- | | |
|-------------------------|------------------------------------------|
| · Measuring Range | 0.05m- 40m |
| · Resolution | 0.001m |
| · Accuracy | ±2mm |
| · Measuring Speed | 0.5sec |
| · Laser Type | 650nm, Class II, <1mW |
| · Beam Size | 25mm@15m |
| · Battery | AAA Battery x2, Up to 10,000 measures |
| · Dimension | 145 x35 x18 mm |
| · Operation Temperature | -5°C~40°C |
| · Storage Temperature | -20°C~60°C |
| · Automatic Power-Off | -Laser 30 Seconds -Device 180 Seconds |

. Overview for CP40

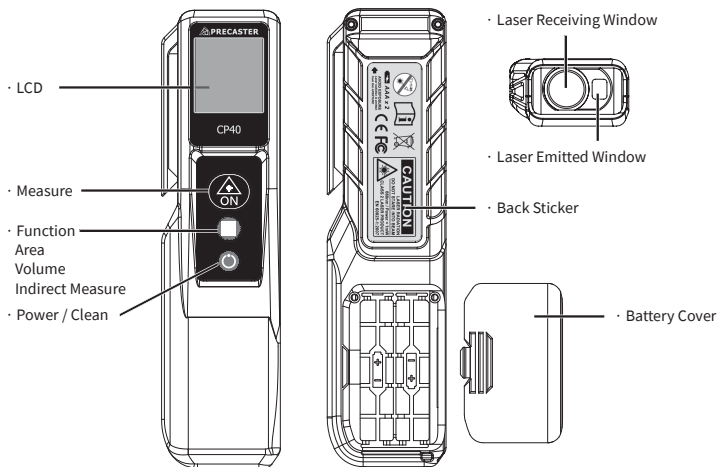

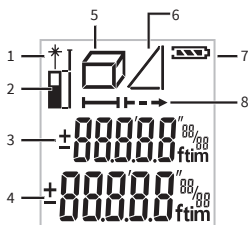


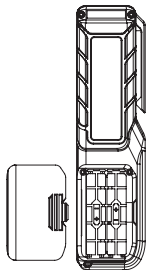
. Overview for Screen



1. Laser Indicator
2. Measuring Reference
3. Previous Measure
4. Current Measure
5. Area / Dimension
6. Indirect Measuring
7. Battery Status
8. Measuring Mode Indicator


. Battery Installation & Power Status

1. This unit is powered by 2 x AAA Batteries.
2. Remove battery lid and observing correct polarity before install batteries.
3. Battery level is showed on screen with batty icon on screen .
4. When the icon  appears, there are approximately 1000 times to measure.
5. Replace batteries when low battery icon  flash on screen.
6. To change new batteries, when install new batteries, then close back lid.




. Power On and Off

When device is off



1. Press  to turn on.
2. Screen will be filled out by icons during internally checking.
3. Device will get into standby screen and ready for measuring.

When device is on

1. Hold  for 3 seconds at any screen to turn off device.


. Distance Measurement

Single Measurement Mode

1. Press  to turn on laser then aim at proper target.
2. Hold steady and press  to measure.
3. Result will be displayed on the screen with a beep.



Continuous Measurement Mode

1. Hold  to active continuous measuring.
2. Measuring results will be vary upon movement and showed on the main screen.

The Maximun and minimum distance will be displayed on Sub screen.

3. Press  to stop.
4. Press  to quit this mode.



. Addition of your measurements

1. To add first measurement with later on, press  to make first number as summand.
2. Then take another measurement and the sum will be displayed on the screen.

. Subtraction of your measurements

1. To subtract first measure with later one, press  twice to make first number as minused.
2. Then take another measurement the subtraction will be displayed on the screen.

. Measuring Function Selection


1. CP40 has three commonly used functions for measuring, you could make select by pressing .
2. By pressing and holding , functions will be popped up in loop from
AREA -> DIMENSION -> INDIRECT MEASURING
3. Release button to stop looping and the selection of functions.

a. Area Measurement


1. Follow the instructions to measure width and length.
2. Area will be calculated and showed on the screen.

b. Volume Measurement

1. Follow the instructions on the main screen to measure width, length and height.
2. Dimension will be calculated and displayed on the screen.

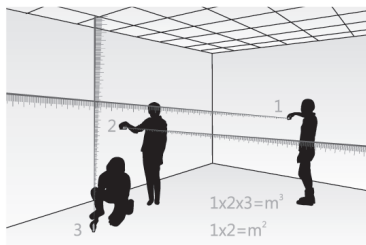



c. Indirect Measurement




1. All the calculations are based on Pythagorean theorem ($a^2+b^2=c^2$) for height.
2. Press  for 3 times to enable indirect measuring.
Follow the instructions on the screen to measure sling lengths and leveling length.
3. Measured Results will be displayed on the screen.







. Settings


1. CP40 has two settings in outer menu.
2. When device is off, hold  than press  to enter setting menu.
3. The two settings are “Unit” and “Reference”.

a. Unit Switch Reference

1. CP40 has universal units and auto converting functions.
2. Press  to select units.
3. Once you select, press  to reference setting. Or press  to restart.

b. Measuring Reference

1. There are two reference for CP40 : rear / front
2. In outer setting mode
3. Press  twice to enter reference setting.
4. Press  to switch among FRONT -> REAR in loop.
5. Once you selected, press  to reference setting.
Or press  to restart.

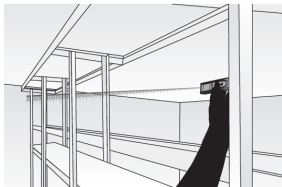


. Error Code

Code	Description	Solution
Err01	Out of measuring range	Measuring in a proper range
Err02	Reflected signal is too weak	Select a better surface
Err03	Out of display range (Max Value: 99999), e.g: result of area or dimension is out of display range.	Divide calculation into intermediate steps
Err04	Pythagorean calculation error	Check and verify values and steps are correct
Err05	Low Battery	Install a new battery
Err06	Out of working temperature	Measure in an environment within specified working temperature
Err07	Ambient light is too strong	Measure in a darker place (shadow target)

. Service Support

Please contact your local dealer or contact us through service email :

 [reps@precaster.com.tw] for further assistance.





PRECASTER ENTERPRISES CO., LTD.

Add: No. 204, Sec. 2, Fu-Hsing Rd., Taichung, Taiwan

Tel: 886-4-2262 1000. Fax: 886-4-2261 6565

[Http://www.precaster.com.tw](http://www.precaster.com.tw)

Email: service@precaster.com.tw